



**100% WATERPROOF**  
**UWATER™K8**

---

**8GB MP3 PLAYER/PLL FM TUNER  
& EARPHONES**

**OWNER'S MANUAL**



**Hackensack NJ 07601 USA**  
**[www.FitnessTechUSA.com](http://www.FitnessTechUSA.com)**

**©2012-2014 Fitness Technologies. Patent Pending.**

## Congratulations

Thank you for purchasing the UWaterK8 Waterproof MP3 Player/FM Tuner. This manual provides detailed yet simple operating instructions to help you enjoy a remarkable audio experience. Please read this manual carefully before using this product.

### Caution

The UwaterK8 is designed for water activities such as swimming, surfing, sailing, skiing, boating, snorkeling, as well as all fitness/outdoor/recreation activities. Product complies with IEC 60529 IPX8 Waterproofing standards, which means that it was tested at 3 meters (10FT) underwater without any damage. FM reception is limited to surface or above surface activities.

.....

**PACKAGE INCLUDES:** UWaterK8 Player/Tuner, Short Waterproof Earphones, 4 Sets of Silicon Ear-Tips, USB Cable, Owner's manual, International Warranty

**OPTIONAL ACCESSORIES:** Long Waterproof Earphones, Dynamic Waterproof Earphones, USB Wall Charger, USB Car Charger

*(available at [www.fitnessstechusa.com](http://www.fitnessstechusa.com))*



No	Name	Function/Description
1	UP/NEXT	Tune+, next song (short Press) Auto Tune+, fast forward (long press)
2	ON/OFF/ PLAY/PAUSE	Power on (long press), play, pause, power off (long press)
3	DOWN/PREV	Manual tune-, previous song (short press) Auto tune-, fast backward (long press)
4	VOLUME +	Volume Up
5	MODE/MENU	Enter Menu, select modes, set
6	VOLUME -	Volume Down

## Quick Start Guide

- A.** CHARGE battery for at least 3 HRS using the USB Cable.
- B.** POWER ON/OFF: Long press control ② (3-4 seconds) for activation/deactivation.
- C.** Download music/audio books (use USB cable)
- D.** Select Mode (MSC=MP3, FM, SYS) by controls ① or ③. Confirm selection by short pressing control ⑤. Long press ⑤ to change modes.
- E.** FM. tune up/down manually (short pressing controls ①, ③ or auto tune up/down (long pressing ①, ③). Read manual page for storing /recalling stations.
- F.** MSC(MP3): Short press ⑤ to access folders. Short press ① ③ to select files. Short Press 2 to PLAY. While playing short press ② again for RANDOM/A-B/REPEAT options.
- G.** Adjust Volume UP/Down controls ④, ⑤.
- H.** To exit FM or MP3 & enter main menu long press ⑤.

Long press: Press for 3-4 seconds

Short Press: Press momentarily then release

## Port

Single 3.5mm waterproof port designed for:

- Battery recharging (connect USB cable)
- Computer interface (connect USB cable)
- Hear Music/Radio (connect earphones)

## More Detailed information

### Select Main Functions

In the main menu, short press the NEXT ① or PREV ③ Control to select the different modes. Press M ⑤ Control to confirm the mode you select and the content in this mode will be shown on LCD.



## Music

In the MUSIC (MP3) mode, the system can play MP3 and WMA music and audio book files and support lyrics shown synchronously.

### MUSIC MODE INTERFACES:



To show the song text synchronized to the played song: In Music play mode, long press "MENU" Control to search the song text. Will display the song text synchronized to the played song only if song text is available. Otherwise, will return to the main menu. Short press "MENU" Control to exit song text function.

If the song lyric is available, the icon "🎵" on the left upper corner will change into "🎵".

## Basic Operation

After enter Music mode, short press "PLAY" Control to play Music, shown as below:

### How music is being played?

Short press "PLAY" Control ② to pause; Long press "PLAY" Control ② to stop and turn off the player.

Short press VOL+ or VOL – Control to increase/decrease a single level of volume.

Long press VOL+ or VOL- Controls to increase/decrease volume continuously.

Short press NEXT ① or PREV ③ Controls to play NEXT /PREV music file.




Long press NEXT ① or PREV ③ Controls to fast forward/ fast backward.

Short press MENU Control to enter Music setting.

Long press MENU Control to exit and return to main menu.








## Music Setting

While music is being played, short press MENU Control to enter Music setting. The interface shown as below:

 Repeat
 Equalizer
 Replay
 Replay gap
 Exit

### Repeat:

Enter Repeat Mode (RPT), short press NEXT or PREV Control to choose different repeat modes. Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random, and Intro can be chosen.

 Normal
 Repeat one
 Folder
 Repeat Folder
 Repeat ALL
 Random
 Intro



**Normal:** Play all the music files in normal sequence in turn till all music files are played.

**Repeat One:** Play a single music file repeatedly.

**Folder:** Play all music files in the current folder in sequence.

**Repeat Folder:** Play all the music files in the current folder repeatedly.

**Repeat All:** Repeat all the music files.

**Random:** Files in the current folder randomly.

**Intro:** Play the first seconds of each of all the music in the current folder in turn.

Short press MENU Control to exit after your selection.

### **Equalizer:**

After choosing EQ mode, short press NEXT or PREV Control to choose different EQ effect. Natural, Rock, Pop, Classic, Soft, Jazz, Dbb can be chosen. Short press MENU Control to exit after your selection.

NOR ROCK POP CLASSOFT JAZZ DEB  


### **Replay:**

Select *Replay Mode* in the main menu. After enter the mode, "A-B" icon shown and "A" flickers. Short press NEXT Control to set start point "A ".Then "A" stop to flicker and "B" start to flicker. Press NEXT Control to set endpoint. "B" stops to flicker. The player will replay the segment constantly. If press MENU Control, the replay course will end and the player will return to normally playing status.

### **Delete Music File:**

In music stop status, short press MENU Control to enter "delete" sub menu as follows:



Select "delete file" to delete a single file, press MENU Control:



Press PREV/NEXT Control, select "YES", short press PLAY Control ② to confirm to delete.



Delete "all files "in the same way. After deleting the selected files, the player returns to MUSIC Mode Interface. Enter "local folder" to select the directory you are going to. Select "Exit "to exit to MUSIC Mode Interface.

### **Replay Gap:**


Replay gap decides the length of time from the end of last replay to start of NEXT replay (unit: second).

## **File Management**

Users can save files in different folders (folders should be created on PC in advance), to manage and music files according to different types. The player supports identification of 99 subdirectories.

## File Management

\* At MUSIC Mode Interface or Music Playing Pause Interface, short press MENU Control to enter the following interface:

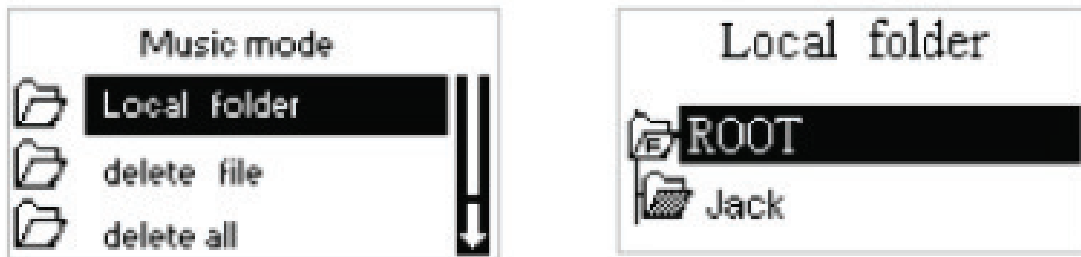

Press PREV/NEXT Control to select folder, short press PLAY Control ② to confirm and switch back to MUSIC Mode Interface.

Short press PLAY Control ② again to play the selected folder.

**Notice:** Player will not identify the folder in which there are not music files.

## NOTE

- \* If encountering encoding mistakes, playing will pause.
- \* The player will point out the invalid files.

## **Disk Unformatted:**

If the flash in the player has not been formatted, or data in the flash is damaged with wrong operation, the user will be reminded after turning on the player. That is “unformatted “. In this case, user can turn off the player and format the player through the attached format tools, or connect the player with PC to format it completely.

MENU Control is of no effect during the course.

**\*No file:** If no music files stored in the player, “no file” will be shown.

## **FM Radio Operation**

This feature requires the earphone to be connected to the player. The radio will not work without them connected.



## **FM Radio Operation (cont'd)**

Enter the Main Menu

Select FM mode and short press MENU Control to enter FM Mode.

### **Automatic Search:**

(1) Press and hold NEXT ① or PREV Control ③ for two seconds, the player will search in the required direction and will stop when a station is found; If you want to stop researching, Press NEXT ① or PREV Control ③ .

(2) In FM Mode, press MENU Control , Press and hold NEXT ① or PREV Control ③ to select "Auto Search", press MENU Control again, the player will search in the required direction and will stop when a station is found; If you want to stop searching, Press NEXT ① or PREV Control ③ .

### **Store the Stations Searched:**

Short press MENU Control to enter sub menu, select "Save" and short press MENU Control again to store it.

The following options can be accessed while FM radio feature is running, Press MENU to access these features:

<b>SAVE</b>	Save Current Station
<b>DELETE</b>	Delete Saved Station
<b>DELETE ALL</b>	Delete All Saved Stations
<b>AUTO SEARCH</b>	Automatically Searches for Stations
<b>EXIT</b>	Returns to FM Radio Screen

### **Manual Station Memory Setting:**

Manually select the station by short pressing ③ or ① Controls.

Press MENU Control and select SAVE to store selected station.

The device can store up to 20 channels.

## System Settings:

Select "sys" in the main menu. The interface shown as follows:

Backlight

Language

Power off

Contrast

Information


Firmware version

Exit

Short press MENU Control to enter different modes. Long press MENU Control to exit and return to main menu.

## Backlight:

Short press PREV/NEXT Control to select the picture. Short press "MENU" to confirm the selection and exit.

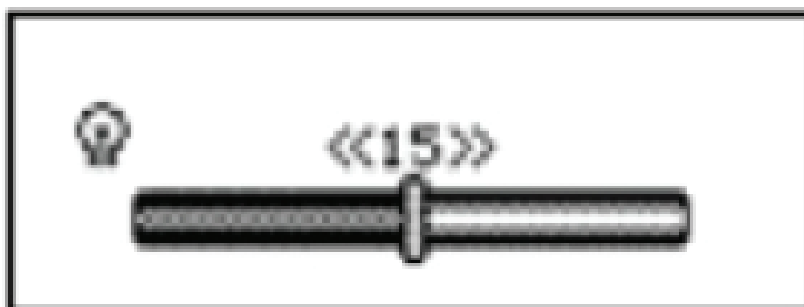



**Language:** Only English is available

**Power Off:** Off Time mode refers that, after a fixed period of time (unit: second) when no operation on keys at Stop mode, the player may turn off automatically to save power. If "0" is selected, power saving function is invalid.

Short press MENU Control twice and adjust the off time. Factory preset is 120 seconds.

**Contrast:** Short press MENU Control and adjust contrast memory in use.

**Firmware Version:** Short press MENU Control to review latest firmware upgraded version.

**Exit:** Exit to main menu.


**Other functions:** USB connection. Communicate with PC.

**PC system requirements:** Operation system: Win2000, XP, VISTA, Win 7, Win 8, Apple, iTunes and Mac.

**Interface:** USB2.0 High Speed

## Connect the Player:

Connect the UWaterK8 with your PC using USB cable. The disk icon or the word "UWaterK8" will appear on the computer. The following icon shows on the UWaterK8 Screen.

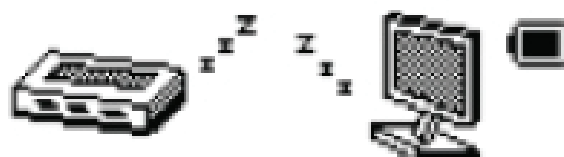

## Power Supply:

USB cable can supply power to the Player when the internal rechargeable battery cannot supply power.



If battery is on low power it will display "low power" and the player will turn off automatically.

You may charge through connecting USB wire to PC .The battery display icon and pulse during charge. After charge is completed, display will indicate "Full".

Charging time 2-4 hours

---

## How To Download from iTunes

### How to Convert to MP3 format and Download songs from iTunes:

1. Open iTunes Preferences.

**Windows:** Choose Edit > Preferences    **Mac:** Choose iTunes > Preferences

2. Click the General Control, and then click the Importing Settings Control in the second section of the window.

3. From the Import Using pop-up menu, choose the MP3 Encoder and then click OK to save the settings.

4. Select one or more songs in your library, then from the Advanced menu, choose Create MP3 version. Songs get converted.

5. Make sure both iTunes and your Player window are open (double click on My Computer and locate the drive that reads "Removable storage device").

6. Once you have both iTunes and the player window open, minimize each window so that you have equal boxes side by side.

7. Select by clicking on each of the converted songs from your iTunes music library that you want to download. You can hold the CTRL Control down on your keyboard for multiple tracks.

8. Using your mouse, simply drag and drop the music selected into the window of your Player.

9. The status light on Player will flash red as the songs are being downloaded.

## SPECIFICATIONS

Power Supply	DC5V (From USB Port)
Dimension (mm)	45(L) x 35(W) x 16(H)
Weight	25g
Battery	3.6V Li-Ion Rechargeable Battery
USB	USB 2.0 High Speed
MP3/WMA	MP3: 32Kbps - 320Kbps(CBR, VBR) WMA: 48Kbps - 192Kbps(CBR, VBR)
Memory	8GB
Support	Windows 2000, XP, Vista, Win 7, Win 8, and Mac (ios)
Maximum Output	Earphone Output: 5mW + 5mW

## Troubleshooting

No Power	Make sure the player is turned on. Check if the battery power is low
No sound is heard from earphone	Make sure that device is fully charged. Check whether Volume is not set to zero and the headphone is plugged in firmly. Corrupted MP3 may make a static noise and the sound may be cut off. Make sure that the music files are not corrupted.
FM reception is poor	Adjust the position of the headphone and player. Turn off the power of other electric devices near the player. The headphone plugged in firmly as the antenna.
Unable to download music files	Check whether USB cable is damaged and is connected properly. Check if the format is Mp3. Check whether the player's memory is full.
If device is jammed	Connect PC/Power Source with USB Cable and device will automatically reset.
Exit FM or MP3 & Enter Main Menu	Long press MENU (5).